
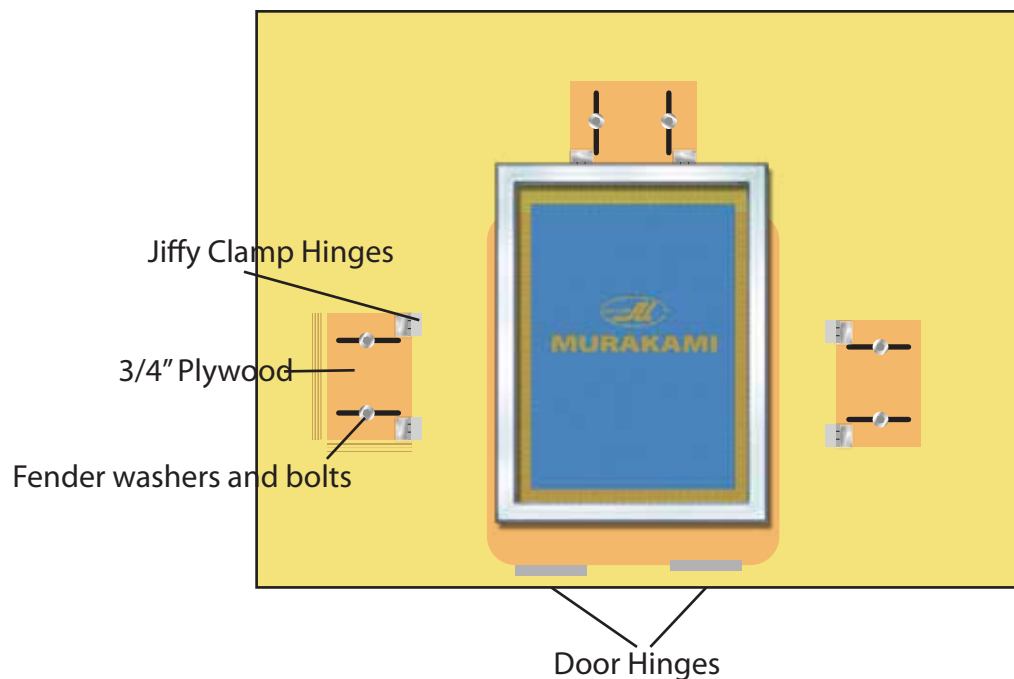


Drill 3/8 inch holes and hammer in T-nuts from the bottom of the board on all dots for the fender washers and bolts to thread into and hold the screen clamp boards in place

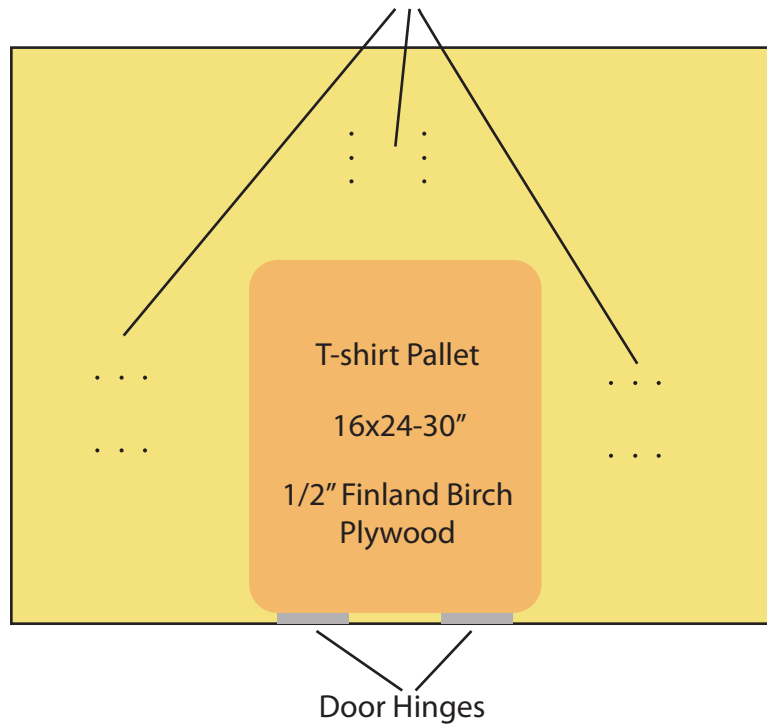

T-shirt pallet on door hinges should tilt up and stay in place when door hinges reach their stopping point so you can load a t-shirt and drop board down printing position.